

Force Torque Sensor - An Introduction

What is a Force Torque Sensor?
How does it work?
Which applications are best suited for this technology?
How to use it with Universal Robots and ROS?



TABLE OF CONTENTS

INTRODUCTION	3
1. FT Sensor - Basics Principles	
2. Functionalities	
3. Applications	6
4. Specifications	
5. FT Sensor Kit for Universal Robots	
6. ROS Package for FT Sensor	10
CONCLUSION	12

INTRODUCTION

With the integration of robots in a wider variety of applications there is a need to give them a stronger ability to sense objects. As many robots now have the capability to 'see', it would be great if they could also add the capability to 'feel' what they are doing. This is the main objective behind force torque sensors. These devices give a sense of 'touch' to the robot. Yet, force torque sensors are not the same as tactile sensors, which means that they don't feel the actual object that is being grabbed, but rather they feel force exerted in all directions. This also means that a force torque (FT) sensor can apply a given force or torque for certain applications. Being able to control the amount of force or torque applied in certain applications opens up a whole new range of applications to robots. If we think about assembly or polishing, these are all applications that require a sense of feeling. The following EBOOK will help you figure out what are the main features of a force torque sensor and more generally in what types of applications these features would be most useful.

1. FT Sensor - Basics Principles

What Is a Force-Torque Sensor?


A <u>FT Sensor</u> is a device that is fitted onto the end of the wrist of your robot arm before the tool. Its purpose is to detect forces and torques that are applied to whatever is attached after it, the robot tool for instance. Since it is between the robot and the tool, it is used to read what is going on with the tool. It can sense forces due to an impact on the tool. It can also register, as resistance (force or torque or both), if the tool cannot insert a part into an assembly process. The FT sensor allows the robot to recognize forces on another level of the robot, it can now feel what is going on with its tool.

What Does 6-Axis Stand For?

6-axis stands for the 3 geometrical axis (X-Y-Z) and the rotations around them (3 axis + 3 rotation). So basically, the sensor can detect the forces in all three directions and the torques around those directions (axis). It can also combined measurements for all these forces and torques, and then the signal can interpret what is going on with the robot tool.

How Does the Sensor Feel the Force?

The casing part of the sensor is attached to the robot wrist. And the moving part is attached to the tool side. When a force is applied on the tool, the sensor reads the distance that the moving part has moved from the casing, depending on the amplitude of the

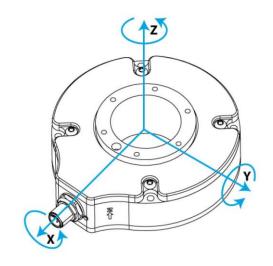

displacement, the sensor returns a force signal to the computer. With the <u>Robotiq FT 150 sensor</u>, this reading is digital right from the start, making the signal very clean with minimal inherent noise and immune to external electromagnetic noise.

Robots are frequently used because of their rigidity. Most applications need rigidity to accomplish the precision necessary in the application. However, having a rigid robot that cannot adapt its motions if a disturbance or an unplanned situation occurs is a set up for problems. For example, if a shaft needs to be inserted into a hole by a robot, the parts can be damaged due to a misalignment of the robot or the part. The robot is not sensitive, it doesn't know if the shaft is entering in the hole the way it is supposed to. As robots are programmed to execute given motions at a given speed, there is no way to acquire feedback on the motion itself. Companies need to find a way to give a sense of feeling to the robot. The same kind of feeling that a worker would feel. If the shaft is misaligned, the worker will feel resistance, because he needs to apply more force on the shaft and will automatically adjust his/her movements.

This is why force torque sensors are necessary in the robotic industry. In fact, as more assembly lines use robots for complex assembly, such as aerospace and electronic devices, the robot will need to feel if something goes wrong.


What Does "Force-Torque" Stand For?

A force torque sensor detects the different forces that are applied on the robot tool in the 3 geometric axes (X-Y-Z). The sensor also detects the torque applied around the 3 different axes. Which basically means that the sensor feels what is going on in all axes. By doing so, the sensor gives feedback to the robot and can adapt its motion to feel the minimum of force that is applied to it. Once the sensor is feeling an acceptable amount of force/torque, the robot can continue its motion without risk. Notice that some sensors can measure force only for a specific axis for a specific application. But one of the most beneficial uses of the force torque sensor is when it is installed at the robot flange or wrist which lets it measure the effort between the tool and the environment.

2. Functionalities

Most robotic applications require a multi-axis or 6-axis FT sensor to give feedback to the robot about the tool itself which can be controlled via these 6 measurements. To measure the effort in all six axes, the force torque sensor usually combines information from a minimum of 6 unitary measuring elements such as strain gauges. Using the geometry of these elements and the physical properties of the material on which they are installed, the sensor can then compute the force and torque along the axes which are meaningful to the robot control loop. When installed on the robot flange, the integrator needs to set the parameters for the relative position and orientation of the sensor with respect to the robot tool.

As you can see in the picture, the sensor is between the robot wrist and the tool. This position allows the sensor to feel the force and torque applied on the tool.

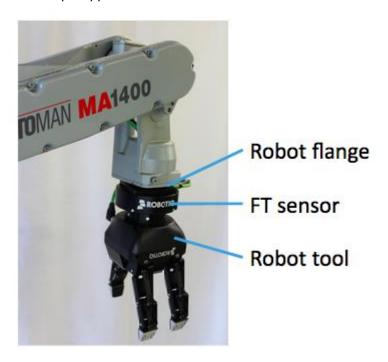

Force and Torque Sensor Measuring Methods

There are various ways to measure a force, generally most of the sensor manufacturers use strain gages with a specific orientation. Having a certain number of gauges would give enough information to the controller/computer to determine the intensity and the direction of the force/torque. Some FT sensors use gauges that digitize the measurement from the start, getting rid of the possibility of electromagnetic noise sensitivity interference, which is an issue experienced with traditional strain gauges.

FT Sensor Signal Communication

FT sensors will output either an analog or digital signal. The signal is the communication method sent to the robot via an analog or digitized input and sent over a field-bus. Analog signals are not ideal in the typical industrial robotic environment which are known for their high level of electro-magnetic noise. For example our FT sensor that is used with the Kinetiq Teaching technology is using a digital signal and is therefore not affected by the electric motors or welding torches used in the welding process. This increases their accuracy and makes them more reliable.

Using the Force Torque Sensor Feedback in the Control Loop

Most robot manufacturers provide software packages that use the information from the sensor(s). This allows the user to program the robot using high level commands. An example might be to do polishing or assembly. The user can also access the force torque data from the sensor and specifically program the desired control of the robot arm and end effector. In these instances the output of the sensor is used to close the loop in the controller, adjusting each of the joint's torque to match the desired output. Robot force

<u>control</u> is useful in applications where the robot needs to interact with a rigid environment or fixtured work piece. These are cases where the robot needs to be reactive to its environment. Though ideally we would like all robots to be reactive to their environments all the time and the move towards collaborative robots is a move in this direction. Yet, being able to give industrial robots this flexibility will be a great boon to industrial robots.

3. Applications

As the force torque sensor can read both force and torque, it would be good to understand, which types of applications require force readings and which types require torque readings. Some applications will use the readings separately, but most applications will use both readings to have good precision.

Which Applications Require Force Readings?

An application that we are seeing often with the sensor is the bench test application. A robot is paired with a sensor and a gripper and is performing some cyclic action on a product. Where the sensor gets involved is when a given amount of force has to be applied. The robot can apply a limited force that has been set by the programmer and it can also monitor this force. This means the product is tested at a given force and the force is monitored to see if there is any change in the behavior of the product.

Which Applications Require Torque Readings?

Hand-guiding would be an example that uses the torque information. Hand-guiding is the action of guiding a robot with your hands. This means you have to apply a certain amount of force on the tool to teach the robot a path, for example. As the force is applied on the tool (that is located after the sensor), you create a torque. This torque can be read in all directions and the signal can be sent to the computer for analysis.

Which Applications Require Both

Assembly tasks would be an example of applications that require both force and torque readings. In fact, in an assembly line, you can encounter different problems (misalignment, tight fits, force tests, etc.). All kinds of situations are present in these applications. You might combine your assembly with a bench test, so that you can test a given feature of your assembly, for example. Or, you can use it to teach your robot specific tasks like Kinetig Teaching.

Now that you can tell what kind of applications require which kind of reading, let's see what applications are presently using the force torque sensor.

1. Grinding/Polishing

Grinding and polishing need to be done with a lot of precision and even with classic methods it is hard to obtain a repeatable result. By using a force torque sensor, the robot can execute a smooth motion with a force threshold, so it doesn't grind too hard on a particular portion of the part. The final result is nice and neat, and all the parts look exactly the same. Medical parts such as replacement knee caps are being polished using a force limited 6-axis robot. Since the surface finish has to be perfect and no imperfections can be allowed, a force torque sensor makes sense.

A robot can perform different polishing steps at a same station. For example, a machined part enters the robotic cell and is grasped by the robot. The robot can then preform a grinding operation using




a rough stone or sandpaper. It can then switch to a thinner sandpaper or polishing compound to complete the application and produce the exact desired finish. The cell is then compact and a single robot can be used. Applications such as deburring can also be done using the same principle.

2. Quality Control

Another branch of applications would be quality control or product testing, in fact some industries need to measure or test a certain motion on a product with a constant and regular force, a force torque sensor would work well for this kind of application. If the part doesn't fit well or where it should go, the robot has feedback and can readjust its motion to put the part in the right position.

3. Assembly

Imagine yourself assembling a given product without feeling what you are doing with your hands... You would never be able to know if the parts are being inserted in the right way. It is almost the same thing for a robot. It has a given path that it is supposed to follow. If the part is supposed to be inserted into another piece and those two parts are misaligned... nothing can tell the robot that something is wrong except a force torque sensor. In fact, once the FT sensor feels an abnormal force, it realigns itself to put the least force possible on the object.

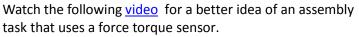





4. Collaborative Applications

Some industrial robotic applications need a collaborative feature. In fact, using an industrial robot in collaborative mode can have a lot of advantages. In collaborative mode you can save programming time or redesign a robot path in a few minutes. Technology such as Kinetia Teaching use a force torque sensor to teach the robot how to do collaborative welding. This technology saves significant time for the shop and a welding path can be designed in a few minutes without deep programming knowledge.

Many applications uses force torque sensors, we can think about haptic technology or teleoperation that both use force limiting operations to give a sense of touch to the human operator through a mechanical interface or vice versa. Force torque sensors are probably the next big advance in the robotic industry. So, make sure to investigate this technology and to think about however sould use it for your applications. It can save valuable programming time via the hand.

think about how you could use it for your applications. It can save valuable programming time via the hand-guiding functions or improve quality control by increasing the accuracy of your applications. All in all it is a powerful addition that can be added to many applications.

4. Specifications

I remember buying my first computer, there was a lot of technical data to compare, so I ended up asking the salesperson 'What was the close quote for me? However, at the moment you cannot go to the closest robot store and ask for the best <u>force torque sensor</u>. The following section explains the basics on FT sensor specifications. So you can determine what is best for you.

4.1 Signal Specifications

There are basically 2 different types of specifications that you need to understand. First the signal specifications which refers to the electronic side of things. There is also the mechanical specifications which refers to the physical dimensions of the sensor.

Force and Torque Measuring Range


The range of force and torque that the sensor can measure. Most sensor manufacturers will rate their measuring range with a +/- sign. This means, for a +/-150 Newton sensor, it can measure 150 N in each direction. For example, the sensor can measure the lift (pull) of a part, including the part's weight, up to 150 N and it can also measure the applied force (push) up to 150 N in any direction as well. However, this is the measuring range, meaning that you can measure 150 N in every direction. Most of the time sensors can be overloaded. If for example you are using a +/-150 N sensor and the application requires or applies more than 150 N then you are heading for trouble. Take note that if an application needs a given force (ex: 100 N) you should use a sensor that can sense more than the required force (ex: 150 N).

Precision - Resolution

The minimum change in force that the sensor can measure. It is not necessary to have a resolution with five digits of precision, in fact the resolution needs to be graded sufficiently to distinguish between events that are pertinent to the robot application. A sensor will need a higher resolution if the applications need more precision or if the parts are really light and thus require a higher calibration to distinguish. For rough applications and heavy parts, the resolution can be coarser.

Precision - Accuracy

Does the sensor measure precisely the applied force and torque? If the force is 50 N, does it really measure 50 N? It is really important to have good accuracy in the use of a force torque sensor, because some robot control software use dynamic models in which the actual force value is important.

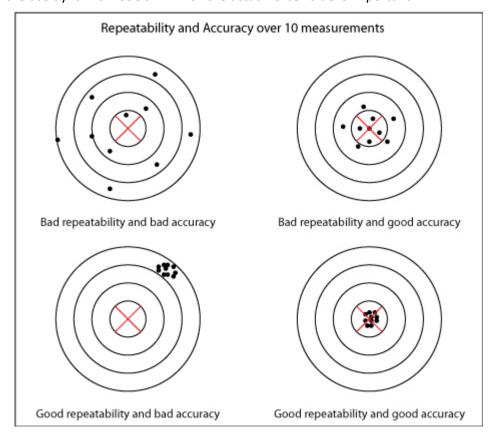

Repeatability

If you apply exactly the same force twice, will you obtain the same value each time? Depending on the application, you may want to have good repeatability, instead of good accuracy, to have a process that is the same again and again. For example, if you are doing polishing/deburring, even if you don't apply the exact same amount or force on a part, if all the parts end up the same... your process is still good right?

Drift

The signal is drifting when the sensor is reading a changing force even if no real force is being applied to the sensor. Force measurements are often used in a control loop. A drift in the measurements here will generate false values that will cause unwanted behavior. For example, a sensor drift in hand-guiding will cause the robot to move even if nobody is touching it. So, you want to have the lowest drift possible. And drift can be affected by different environmental aspects like temperature and humidity. By calibrating and recalibrating the sensor often, you reduce your risk of drift.

Noise level

How much noise is generated by the sensor. If the sensor signal is analog, then this noise is added to the force signal. A high level of noise will require signal filtering, reducing the effective bandwidth of the sensor and adding delay to the reaction time of the robot.

Some sensors, particularly sensors with a digital signal are immune to <u>external electrical noise</u>. This means that the signal is not effected by external noise and that the signal is clearer, so there is no need to apply a filter on the signal. Also it will mean that the sensor is exchanging more accurate information with the robot, reducing delays.

Output rate

This is the number of force readings per second that the robot can read from the sensor. Most sensor manufacturers will express this specification in Hertz (Hz). For example 100 Hz, means 100 reading per second or a reading every 0.01 seconds. The output rate needs to be sufficient to feed the control loop in the robot program, so that it remains stable.

4.2 Mechanical Specifications

Dimensions

Basically all the external dimensions are important to determine if the sensor will physically fit your robot. Thickness can also be an interesting specification to consider since it will influence the distance between the robot wrist and the robot tool.

Robot Fit

Sensors are often designed in order to fit well on specific robots. Although you can fit most sensors on different kinds of robots. Manufacturers provide adapter plates that can be attached between the robot wrist and the sensor. Not all manufacturers provide adapter plates for all types of robots. Your vendor or application engineer should be able to determine what is the best fit for your robot, sensor and tool?

Weight

In the end it often comes down to weight. The robot you are using has a certain payload and if you add a sensor, a gripper and some adapter plates, each addition is reducing the functional payload of the robot. Make sure to sum all the components that will be attached onto your robot wrist to make sure it can still perform the application you have in mind. The benefits of adding a sensor might depend on how much latitude you have in your robot payload. But your application might also really benefit from the accuracy, ease of use and functionality gained from a FT Sensor. Ultimately this is for you to decide or if you need help you can do what I did with my first computer, ask someone... like a knowledgeable robot integrator.

5. FT Sensor Kit for Universal Robots

This section presents the package for our new <u>FT 150 Force Torque Sensor</u> on Universal Robots. This pairing will allow you to create a whole new array of applications for this popular collaborative robot.



Why Use a Force Torque Sensor?

Some of you may ask: Why put a force torque sensor on a Universal Robot?

In fact, the collaborative robot already has certain ways to measure force and torque. Unfortunately for specific tasks, the robot measurements for force and torque might not be precise enough. The robot reads the current in its motors and uses the length of its segments to determine the force applied on its wrist. However, depending on the configuration of the robot, the force might be misinterpreted. By using the 6-axis FT 150 at the wrist, you can directly measure the forces being applied on the tool, making your readings and applications more accurate.

Easy Installation

The FT/UR kit includes all the accessories that are needed to install the sensor easily. First of all the appropriate mechanical adapter plate is provided with the kit. Yet, the most important advantage of this package is that the sensor software and drivers can be easily and automatically installed onto the UR teach pendant by inserting a USB stick.

Through the FT programming the sensor is recognized and installed directly into the Universal Robots' interface. This allows the robot controller to directly read the force and torque measurements provided by the sensor. So there is no need to have another external controller that analyses the signal. The data can be read directly. Videos are available on our <u>Robotiq YouTube channel</u> to help you install the entire kit on your UR robot.

Important to remember, this kit will still allow you to install whatever tool you want at the end of the sensor. So just imagine all the applications you can apply this to! You can then have precise force and torque measurements in a few minutes to accomplish a wide range of applications.

6. ROS Package for FT Sensor

Force torque sensors are used in research for many advanced robotic manipulations. At the same time, <u>ROS</u> is widely adopted by top academic and corporate research teams around the world. This is why we developed a ROS package for our recently released <u>FT 150 Force Torque Sensor</u>. This sensor and our other Robotiq devices can be programmed with ROS libraries.

How to Use the FT Sensor in ROS

The sensor is connected via the USB port of a computer. The signal has to be converted by a USB to serial port (RS-485). This converter is included when you purchase the FT 150 Sensor.

The Sensor measures the forces and torques applied to the tool (which is in turn fixed to the sensor).

The ROS package provides all the required code to read what the sensor measures and transforms this into usable data. The forces are shown in terms of Newtons (N) and the torques are shown in Newton/meter (N/m). These units are shown as float variables.

The ROS package publishes the data at a rate of 100Hz per topic. These topics are accessible by all the other ROS nodes.

The FT 150 Sensor package also provides a service that allows the user to 'zero' the sensor or provide a base referential reading. In fact, the program reads the actual value of force/torque as a reference and then shows the difference between the next value and the registered value.

Advantages

The ROS package makes it easy to use the FT 150 as a building block for your robotic application(s). In fact, in a couple of minutes, the sensor can be installed and ready to work with your robot. The user only has to follow the steps provided in the <u>instruction manual</u>.

ROS



"ROS was designed to be as distributed and modular as possible, so that users can use as much or as little of ROS as they desire. We'll cover what components make up ROS elsewhere, but the modularity of ROS allows you to pick and choose which parts are useful for you and which parts you'd rather implement yourself." -ROS maintainers.

The other advantage of ROS is that since it is designed to provide a standardize method to

communicate with all your different types of robots, it means less individualized programming and ultimately easier communications. If you want to get further information on ROS, check out the following links.

As FT sensors move out of the research labs and into industry, ROS industrial will move along with them. As with the benefits of programming your robot using the UR Kit, using ROS industrial also takes the block or stack approach which makes programming much less complicated. And saving programming time is saving money, thus improving your bottom line, which is another great advantage of adding a force torque sensor to your application.

- Why use ROS
- Robotig's Adaptive Robot Gripper Now On ROS Industrial

CONCLUSION

I hope this document has shown you some reasons how Force Torque Sensors can positively impact your production line. FT Sensors are very useful and flexible devices to have in your robotic cell, as they can provide easy programming paths and tasks, as well as increasing precision in your assembly or other machining tasks. So when you are choosing a sensor make sure to make a flexible decision by looking at all the specs and adding up all the weight requirements and make sure the FT sensor fits your application(s). And as I always say, particularly if it's your first time setting up this type of application, you can always do what I did with my first computer, ask someone... like a knowledgeable robot integrator.

Ask...

So if you are still not sure whether or not a FT sensor is right for your application, you should definitively ask your automation representative or application engineer if your applications would be good candidates for force torque sensors. Discuss with him/her what improvements or gains are achievable by adding this technology? You should definitively discuss the specifics of your applications with the representative or application integrator and determine what best meets your needs instead of adapting your operations to some standard set up.

For further information, feel free to visit our website: www.robotiq.com

ABOUT ROBOTIQ

Robotiq designs and manufactures flexible robot grippers. We aim to give to industrial manufacturing – from large businesses to SMEs – flexible peripheral solutions to optimize automated processes by providing universal, agile and rugged robotic tools.

We work with robot manufacturers, system integrators and end-users to enable new applications and improve productivity.

We are Robotiq. We make tools for agile automation.

TO LEARN MORE

For any questions concerning robotics and automated handling or if you want to learn more about the advantages of using flexible electric handling tools or force torque sensors, contact us.

Phone (USA and Canada): 1 888 762-6847 extension 122 Phone (Anywhere in the world): 1 418 380-2788 extension 122

Email: info@robotiq.com

Website: www.robotiq.com

Blog: http://blog.robotiq.com/

Let's keep in touch via social media





LEARN ABOUT ROBOTIC INDUSTRY NEWS,
APPLICATIONS AND TRENDS

GET THE LATEST NEWS ABOUT ROBOTIQ





WATCH VIDEOS OF OUR PRODUCTS

GET THE LATEST NEWS ABOUT ROBOTIQ